




## Apple Multiple Scan 1705 Display



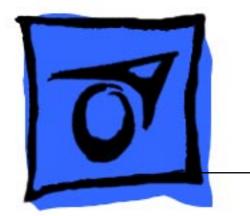

## Basics

## Apple Multiple Scan 1705 Display







### Overview

The Apple Multiple Scan 1705 Display is a low-cost monitor with a 17-inch CRT (15.8-inch viewable image size).

This monitor comes with a Macintosh-to-VGA adapter so it can be used with most IBM PC-compatible computers equipped with VGA or greater capability.





### Features

Features of the 1705 monitor are

- A 17-inch color display
- Three different and independent lines to drive for red, green, and blue.
- 111.5 MHz bandwidth
- High resolution CDT (Color Display Tube) display:
  - Horizontal 1280 dots
  - Vertical 1024 lines without blurring.
- Analog compatibility at an H-frequency of 30 to 65.8kHz.

This monitor is thoroughly checked and adjusted for an optimum picture before it leaves the factory. However, there may be some minor adjustments needed depending on the particular location in which the monitor is operated.





Adjustments that can be made with the user controls are

- Brightness
- Contrast
- Horizontal center
- Width of picture
- Vertical center
- Picture height
- Picture curvature
- Picture side alignment
- Degauss

Factory settings can be restored by pressing the Down and Up buttons at the same time.





### **Troubleshooting and Repair Tips**

The monitor stand does not need to be removed before the rear housing is removed.

When the video and main deflection boards are removed from the bezel, special care must be taken to avoid damaging the user brightness and contrast controls. These knobs protrude about one inch past the main bracket and will not support the weight of the main deflection board and attached brackets.

The video board and the main deflection board cannot be separated without risk of damaging the CRT connector. Therefore, the video board and main deflection board are considered one module and will be replaced accordingly.

Connectors P302, P702, and P703 on the main deflection board and video board are difficult to remove. Use a small, flat-blade screwdriver to gently pry back the tabs before removing these connectors.





### **Special Tools**

When adjusting the monitor, check luminance readings using a color analyzer or photometer. If such equipment is not available, then use a 246 or an L-248 light meter. Do not use other light meters. The readings given in the Adjustments chapter are based on these meters.

The Apple high-voltage probe (Apple part number 076-0392) will also be needed. Readings must be based on this probe and not on other high-voltage probes available on the market. **Do not** use other high-voltage probes.

The Display Service Utility (DSU) in the Diagnostics Utilities folder on the Service Source Companion CD contains display patterns to help adjust the display. Within the DSU, select Pattern Selections: Multiple Scan 720/1705 to access the screen patterns used for this monitor. Refer to "Non User Adjustments" in the Adjustments chapter.








## Specifications

Apple Multiple Scan 1705 Display



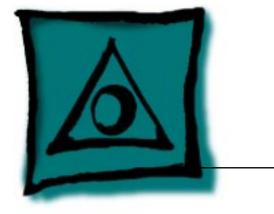



## Characteristics

**Picture Tube** 

Specifications

Size/Active Video Display area 17 inches FST, 15.8-inch diagonal viewable image sizeGun: In-lineNeck Diameter: 1.164 inches (29.1mm)Phosphor: P22Dot Pitch: 0.28 mm

**Screen Resolution** 

720x400 at 70 Hz in VGA mode 640x480 at 60 Hz in VGA mode 1024x768 at 70 Hz in 1024x768 mode 640x480 at 70 Hz inVESA mode 800x600 at 72 Hz in SVGAII mode 1280x1024 at 84 Hz in 1280x1024 mode 1280x1024 at 60 Hz in UVA11 mode



Specifications	Characteristics - 2
Scan Rates	Vertical refresh rate: 47-120 Hz Horizontal scan rate: 31-65 kHz In addition, to the above scan rates, this display works at the following VESA (Video Electronics Standards Association) standard modes. See the manual that came with the computer or video card to determine which resolutions are supported: 640x480 at 60 Hz in VGA mode 640x480 at 75 Hz in VGA mode 800x600 at 60 Hz in SVGA mode 800x600 at 75 Hz in SVGA mode
Cable Connector	15-pin miniature D-type
Input Signals	Red, green, blue signals; separate sync





#### System Compatibility

- This display works with most IBM PC-compatible computers equipped with VGA (Video Graphics Array) or greater capability. A video card may need to be installed to use this monitor with some computers. For more information, see the computer manual.
- Any computer equipped with a Boogie Board will support 24bit color.

### 1705/CPU Compatibility List

Video Source	Standard Configuration	With Additional Memory
PowerMacintosh 9500	24-bit: 16.7 million colors	24-bit: 16.7 mil- lion colors
Power Macintosh 8500	24-bit: 16.7 million colors	24-bit: 16.7 mil- lion colors






Video Source	Standard Configuration	With Additional Memory
Power Macintosh 7500 Power Macintosh 7200	24-bit: 16.7 million colors	24-bit: 16.7 mil- lion colors
Power Macintosh 6200	16-bit: 32K colors	24-bit: 16.7 mil- lion colors
Powe Macintosh 8100	16-bit: 32K colors	24-bit: 16.7 mil- lion colors
Power Macintosh 7100 Power Macintosh 6100	8-bit: 256 colors none	16-bit: 32K colors no memory upgrade
Power Macintosh with AV	16-bit: 32K colors	no memory upgrade
Quadra 610, 650, 700 800	4-bit: 16 colors	8-bit: 256 colors





Specifications

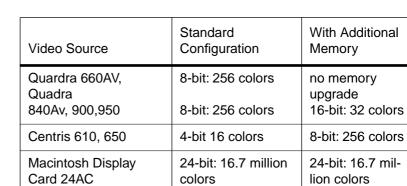





Video Source	Standard Configuration	With Additional Memory
Cards: 4•8, 8•24,8•24GC Macintosh II, IIx IIcx, IIfx	This group of comput not directly compatibl Multiple Scan Display Macintosh Display ca party adapter or third	le with the 1705 y. They require a
Macintosh Ilci, Ilsi		
Macintosh LC 475, Quadra 605		
Macintosh LC, LCII, LCIII Macintosh Power- Books		
PowerBook duo Dock		
Third Party Cards		





### **Controls and Ports**

### **User Controls**

Specifications

#### Power

Front panel: brightness and contrast control knobs; degauss button; down and up buttons, which also perform the recall function; and select buttons to reset factory settings and adjust size, shape, alignment, and borders of picture

### **I/O Ports**

Power cord receptacle and video port





Specifications

## Physical and Electrical

Power Supply	Universal power supply Voltage: AC 90-264 volts (V) Frequency: 47/63 hertz (Hz), single phase Power: 100 watts (W) maximum
Size and Weight	Height: 17.6 in. (437 mm) Width: 16.8 in. (420 mm) Depth: 19.6 in. (479 mm) Weight: 45 lb. (20.5 kg)
Monitor Stand	Built-in tilt and swivel






### Environmental

Temperature	Operating: 50°F to 104°F (10°C to 40°C) Shipping: -4°F to 151°F (-40°C to 65°C) Storage: 32°F to 140°F (0°C to 60°C)
Altitude	Operating: 0 ft. to 10,000 ft. (0 m to 3,000 m) Shipping: 0 ft. to 35,000 ft. (0 m to 10,606 m)
Humidity	Operating: 20% to 95% noncondensing Shipping: 5% to 95% noncondensing Storage: 5% to 95% noncondensing
Power Saving Feature	This monitor conforms to the Energy Star program of the United States Environmental Protection Agency. The power saving feature is compatible with the Display Power Management Standard (DPMS) of the Video Electronics Standards Association (VESA).





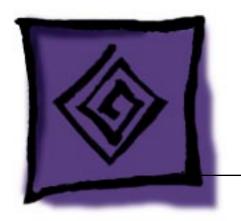

# Troubleshooting

Apple Multiple Scan 1705 Display



## General

In this chapter, you will find Symptom Charts designed to help you diagnose and repair the Multiple Scan 1705 Display.

Go through the Symptom Charts until you find the right symptom. Because cures are listed in the order of the most likely solution, begin with the first listed cure. Verify whether or not the product continues to exhibit the symptom. If the symptom persists, try the next cure.

If you require additional assistance, contact Apple Technical Support.



## First Checklist

**Important:** Many Apple Multiple Scan Display modules returned for repair are found to be fully operational. Read this checklist before you return a module, and prevent needless module replacement and unnecessary time delays.



# • The Apple Multiple Scan 1705 Display is not compatible with all computers.

This display works with most IBM PC-compatible computers equipped with VGA (Video Graphics Array) or greater capability. A video card may need to be installed to use this display with some computers. For more information, see the computer manual.

The display is preadjusted to work with any computer that has the following timing ranges:

• Horizontal scan rate of 31-65 kilohertz



Vertical refresh rate of 47-120 hertz

For more information on what computers or video cards are compatible with the 1705 display, see the Specifications chapter.



# The CRT raster will not always resemble a perfect rectangle.

CRT tolerances allow for some distortion. Additional distortion can be caused by magnetized metal objects (desks, file cabinets, etc.). Move the unit to a different location if you notice raster bowing or bent raster edges.



### Jitter, faint lines, or screen movement can be caused by external interference such as electronic devices and fluorescent lights.

Move the unit to another room or building to help determine if external interference is the source of the problem.







# A maladjusted screen can mimic the symptoms of deflection board or CRT failures.

By performing the adjustment procedures, you might determine if one or more of the adjustments is the cause of the problem.



### CRTs rarely fail.

Needless CRT replacement can be prevented by checking display adjustments, checking the possibility of other defective modules, and accepting small imperfections in screen display.

If you have any doubts about whether a CRT is defective, contact Apple Technical Support.



## Symptom Charts

### No Raster

No raster with LED on

- 1 Check monitor cable connections. Thumbscrews must be tightened securely. If a video card is used, the monitor cable must be secured to the card.
  - 2 Adjust brightness and contrast controls (see "User Adjustments" in Adjustments).
  - 3 A screen saver may be activated. Move mouse or press any key to reactivate the screen.
  - 4 The Energy Saver option may be on. Move mouse or press any key on the keyboard to reactivate the display. The display reactivates in about 20 seconds.
  - 5 Some Macintosh computers may not wake up after Energy Saver is activated. Restart computer and disable Energy Saver.
  - 6 Go to "Check High Voltage."



### No Raster (Continued)

No raster with LED off

- 1 Ensure that power cord is plugged in properly.
  - 2 Check power outlet at the wall by plugging in an electronic device that works.
  - 3 If the display is plugged into a computer, ensure that computer is on and power cord firmly connected.
  - 4 Check video cable connections at computer and monitor. Thumbscrews must be secure. If a video card is used, the video cable must be properly connected to it.
  - 5 Replace video and main deflection boards. See "Main Deflection, CRT/Video Boards and Rear Fence" in Take Apart. Adjust cutoff and white balance. See "Cutoff and White Balance" in Adjustments.
  - 6 Send the monitor to Apple for repair.





### No Raster (Continued)

No raster with LED yellow

- 1 Check video cable connections at computer and monitor. Thumbscrews must be secure. If a video card is used, the video cable must be properly connected to it.
- 2 See "Do You Need a Video Card" in monitor user manual.





### Video

Screen flickers

- 1 Check the monitor cable connections. The thumbscrews must be tightened securely. If a video card is used, the monitor cable must be secured to the card.
- 2 Check for external interference by moving the monitor to another location.
- 3 If using more than one monitor with a computer, move the monitors so they are least 18 inches apart.
- 4 If a video card is used, check the refresh rate. Refresh rates below 60 Hz may cause flicker. See the video card manual to raise the refresh rate above 60 Hz.
- 5 Doublecheck items 1 through 4.
- 6 Replace the video and main deflection boards. See "Main Deflection, CRT/Video Boards and Rear Fence" in Take Apart. Adjust cutoff and white balance. See "Cutoff and White Balance" in Adjustments.



### Video (Continued)

Screen is blurred	1	Adjust Focus at VR F1 and F2. See "Focus Adjustment" in
		Adjustments.

- 2 Doublecheck focus.
- 3 Replace the video and main deflection boards. See "Main Deflection, CRT/Video Boards and Rear Fence" in Take Apart. Adjust cutoff and white balance. See "Cutoff and White Balance" in Adjustments.
- Raster is too bright 1 Adjust brightness control. See "User Adjustments" in Adjustments.
  - 2 Adjust cutoff and white balance. See Adjustments.
  - 3 Doublecheck items 1 and 2.
  - 4 Replace video and main deflection boards. See "Main Deflection, CRT/Video Boards and Rear Fence" in Take Apart. Adjust cutoff and white balance. See "Cutoff and White Balance" in Adjustments.



No color

### Video (Continued)

Colors are too green, red, or blue, and the screen is unreadable

Troubleshooting

- 1 Ensure that the video card or computer video port is good by connecting a monitor that is known to be good.
- 2 Ensure that the video cable is properly connected and the thumbscrews are secure. If a video card is used, the video cable must be properly attached to it.
- 3 Adjust cutoff and white balance. See "Cutoff and White Balance" in Adjustments.
- 4 Doublecheck items 1 and 2.
- 5 Replace the video and main deflection boards. See "Main Deflection, CRT/Video Boards and Rear Fence" in Take Apart. Adjust cutoff and white balance. See "Cutoff and White Balance" in Adjustments.

Ensure that the setting for the number of colors in the Monitor Control panel is correct and not set to black & white. See the monitor user manual.





### Geometry

Raster is too short, tall, narrow, or wide

- 1 Adjust the width and height of the screen. See "User Adjustments" in Adjustments.
- 2 Doublecheck the user controls.
- 3 Replace video and main deflection boards. See "Main Deflection, CRT/Video Boards and Rear Fence" in Take Apart. Adjust cutoff and white balance. See "Cutoff and White Balance" in Adjustments.



### Geometry (Continued)

Raster is not centered

- 1 Check that the distortion is not due to environmental conditions. Move the monitor.
- 2 Adjust the vertical and horizontal center of screen. See "User Adjustments" in Adjustments.
- 3 Adjust the raster center at VR701. See "Raster Center Adjustment" in Adjustments.
- 4 Doublecheck items 1 through 3.
- 5 Replace video and main deflection boards. See "Main Deflection, CRT/Video Boards and Rear Fence" in Take Apart. Adjust cutoff and white balance. See "Cutoff and White Balance" in Adjustments.





### Miscellaneous

Indicator light goes out before adjustment of display controls is completed The LED will go out after 10 seconds by design. This is a normal function.





## Checking High Voltage

**A**Warning: Read all of the warnings, notes, and steps of this procedure before beginning.

**A**Warning: Voltage at the anode, with the power on, can cause serious injury. Doublecheck all multimeter connections before taking the reading.

**A**Warning: Probe the anode carefully. Serious damage and injury may occur if the anode is knocked off while the CRT is charged.

**Note:** Do not attempt this procedure without the Apple high-voltage probe. Use only the Apple high-voltage probe. Other high-voltage probes will not give accurate readings for this procedure.






Before you begin, remove:

- Rear Housing
- EMI Shield
- 1 Attach the Apple high-voltage probe to the multimeter and attach the ground wire to the chassis.
- 2 Be sure the monitor is attached to a computer and has power.
- 3 Turn on the monitor.
- 4 Carefully insert the probe under the anode wire connector.
- 5 The reading should be 25 VDC on the meter. This is actually 25 kV. Most of the voltage is across the high-voltage probe.


**Warning:** Do not remove the probe from under the anode wire connector until power is turned off. Injury or damage to equipment may occur.

- 6 Turn off monitor.
- 7 Unplug monitor.
- 8 Remove the probe from under the anode wire connector.
- 9 Go to the "No Raster Flowchart."

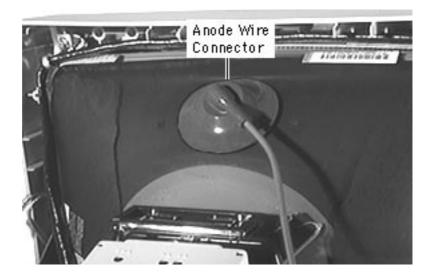





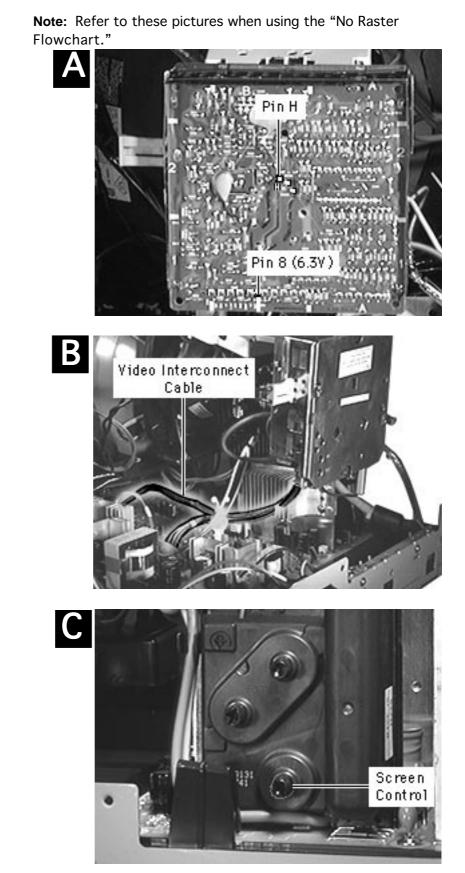






## No Raster Flowchart


### No Raster Flowchart

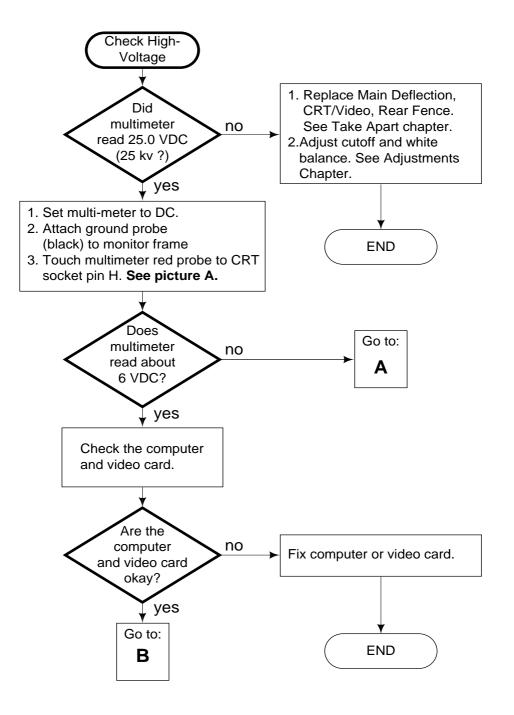






## No Raster Flowchart (Continued)

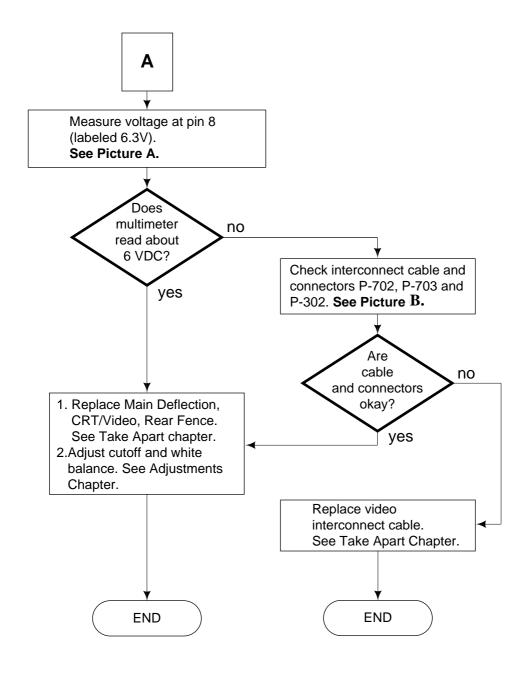





#### No Raster Flowchart (Continued)

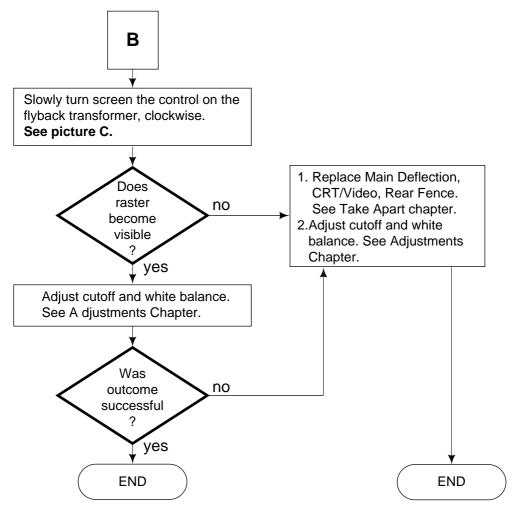





Apple Multiple Scan 1705 Display





## **Special Safety Precautions**

The only potential source of X-Radiation is the CRT. When the high voltage circuitry is operating properly, there is no possibility of an X-Radiation problem. Keep the high voltage at the factory-recommended level of 26 kV. This voltage must not exceed 29 kV at zero beam current at rated voltage.


See Adjustments chapter for checking and adjusting high voltage.

#### Helpful drawing

At the end of this chapter, there is a simplifed wiring diagram that shows all of the connector locations and names. You may want to print it out.





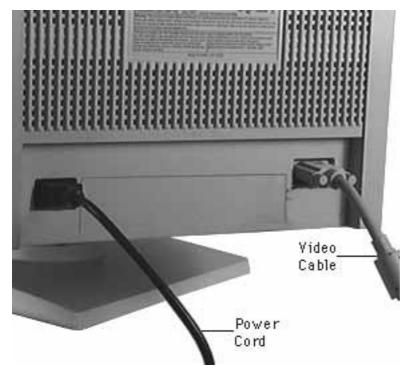

### Monitor Stand

No first steps required.

1 Remove the video and power cables from the back of the monitor.

**Caution:** When the monitor is face down, it is resting on the CRT screen. The CRT must rest on a protective, nonabrasive surface or the screen will become damaged.






2 Place the monitor face down on a protective mat.








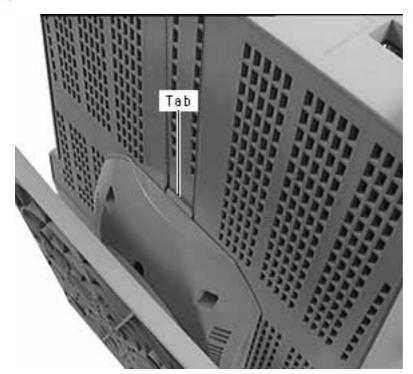

3 Depress the tab on the rear of the housing, just behind the monitor stand.





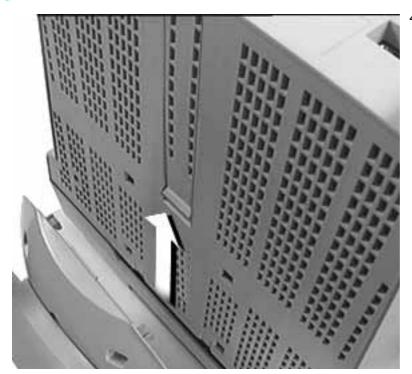


4 Slide the monitor stand toward the back of the monitor and remove.







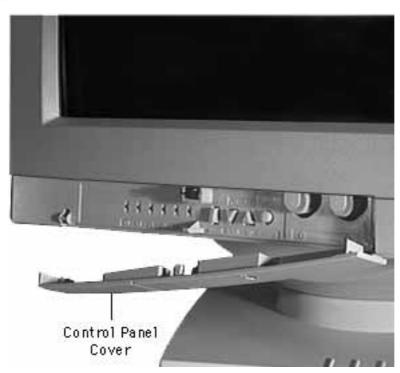

#### Control Panel Cover

No first steps required.

**Caution:** Grasp the cover as close to the hinge as possible, or the cover may break.

- 1 Open the control panel cover.
- 2 Grasp the cover at one side and pull so slot disengages bezel.
- 3 Repeat this procedure for the other side of the panel.



#### **Rear Housing**


First:

No first steps required

**Warning:** This product contains high voltage and a highvacuum picture tube. To prevent serious injury or equipment damage, review the CRT safety and discharge instructions in Bulletins/Safety.





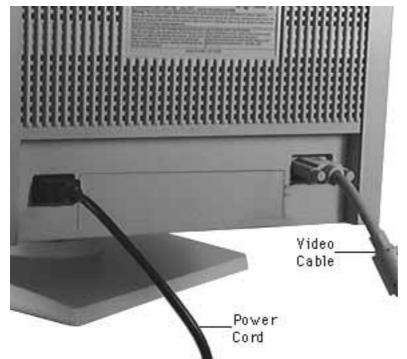

1 Remove the power and video cables from the monitor.

**Caution**: When the monitor is face down, it is resting on the CRT screen. The CRT must rest on a protective, nonabrasive surface or the screen will become damaged.






2 Place the monitor face down on a protective mat.







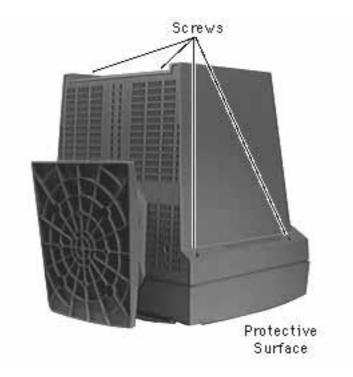

- 3 Remove four screws securing the rear housing to the bezel.
- 4 Lift the rear housing from the chassis.




#### EMI Shield

Before you begin, remove the rear cover.

**Warning:** This product contains high voltage and a highvacuum picture tube. To prevent serious injury or equipment damage, review the CRT safety and discharge instructions in Bulletins/Safety.






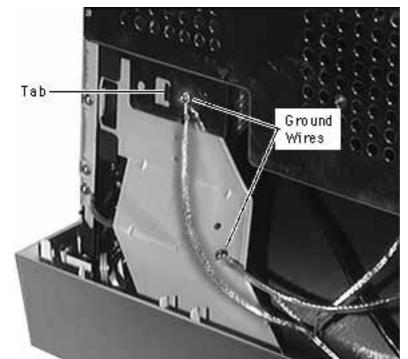

- Remove two screws securing the ground wires to the left and right side brackets.
- 2 Remove two screws securing the ground wires and EMI shield to the left and right side brackets.
- 3 Carefully pull the EMI shield tabs away from the side brackets.






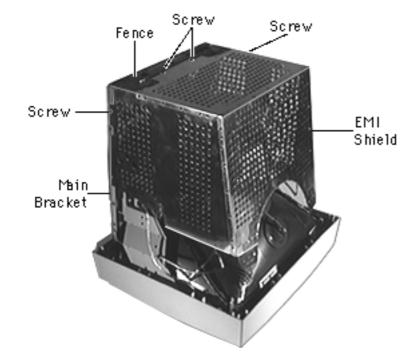

- 4 Remove two screws securing the EMI shield to the main bracket.
- 5 Remove two screws securing the EMI shield to the rear fence.





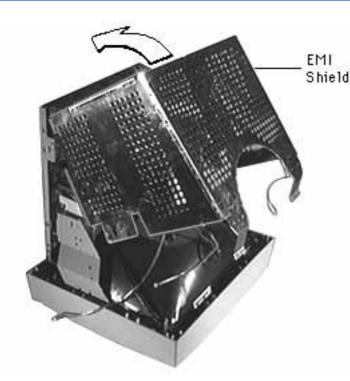

6 Tilt the EMI shield so the shield tabs clear the slots in the rear fence and lift off.

**Replacement Note:** If you need to remove the grounding brackets, remove one at a time, so the other grounding bracket can be referenced for proper installation of the tabs into the EMI shield.

Replacement Caution: The grounding bracket tabs must be inserted correctly or the CRT will not be properly grounded, resulting in equipment damage.





**Fake Apart** 

# Main Deflection, CRT/Video Boards and Rear Fence

Before you begin:

- Remove Rear Housing
- Remove EMI Shield
- Discharge CRT

**Warning:** This product contains high voltage and a highvacuum picture tube. To prevent serious injury or equipment damage, review the CRT safety and discharge instructions in Bulletins/Safety.

**Caution:** To prevent ESD damage to the components, wear a grounding wriststrap. Never use a grounding wriststrap until after discharging the CRT.








1 Set the monitor on the bottom bracket.






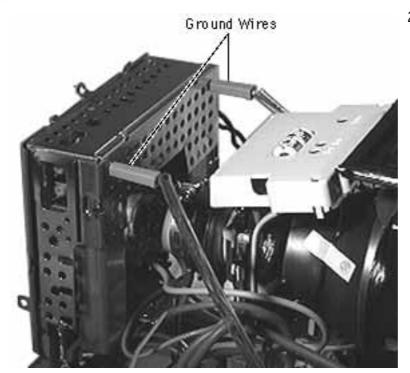

2 Disconnect two ground wires from the video board.






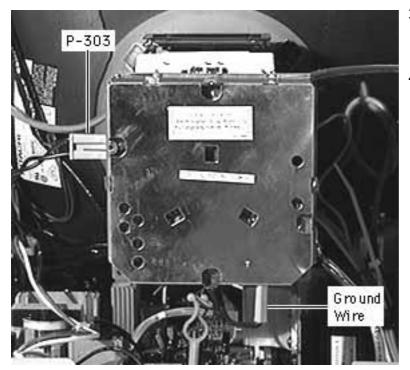

- 3 Disconnect the twowire cable from P303 on the video board.
- 4 Disconnect the ground wire from the bottom of the video board







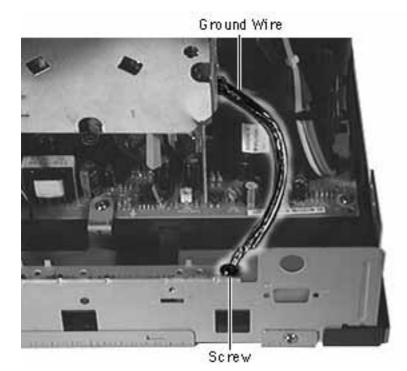

5 Remove one screw securing the ground wire to the rear fence.





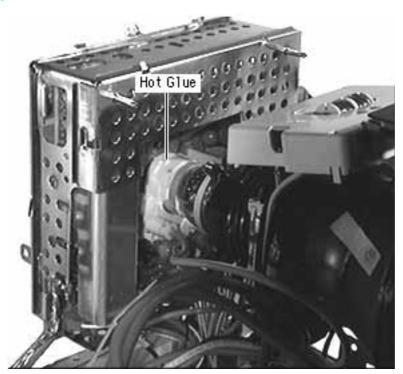


**Caution:** Damage will occur if the CRT is marred with pliers when removing the hot glue.

**Note:** If there is a portion of hot glue hanging from the connector, use it to peel the hot glue from the CRT.

6 Using needle-nose pliers, peel the hot glue from the CRT.





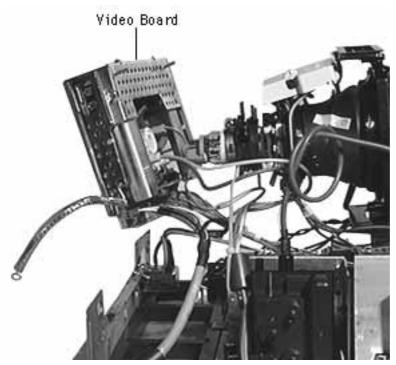


**Caution:** CRT pins are easily damaged. Gently rock the video board back and forth while pulling it away from the CRT.

**Note:** If gently rocking and pulling the video board does not loosen it from the CRT, remove more hot glue.

7 Remove the video board from the CRT.





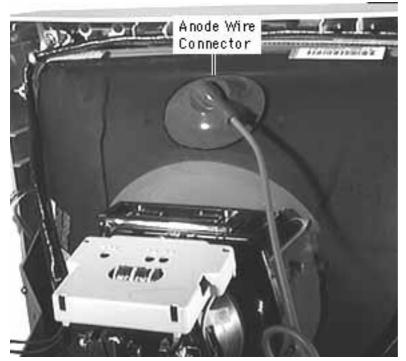


**Warning:** Be sure the monitor has no power and the CRT has been properly discharged. Serious injury could occur if the anode wire is removed while the CRT is charged.

8 Remove the anode wire connector from the CRT.





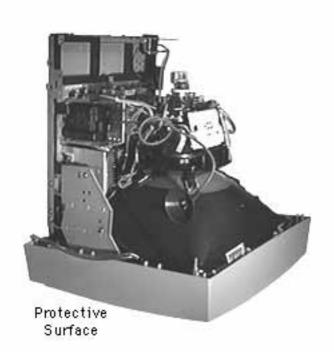


**Caution:** When the monitor is face down, it is resting on the CRT screen. The CRT must rest on a protective, nonabrasive surface or the screen will become damaged.

9 Place the monitor face down on a protective surface.






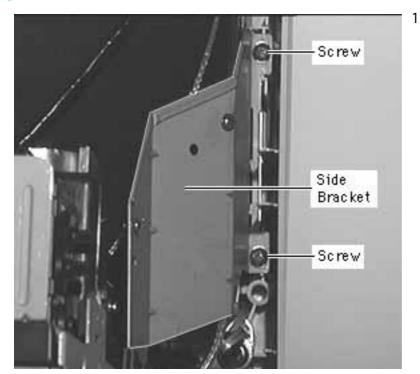

10 Remove four screws (two each bracket) securing the left and right side brackets to the bezel.





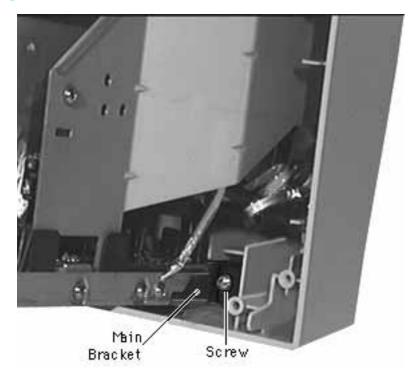

11 Remove two screws securing the main bracket to the bezel.








12 Lift and tilt the video and main deflection board assembly away from the CRT.

**Replacement Note:** Ensure P601, P701, P702, P703, P901 and P902 have cables installed before securing the side and bottom brackets to the bezel.

**Replacement Caution:** Do not pinch any wires when positioning the side and bottom brackets into the bezel.






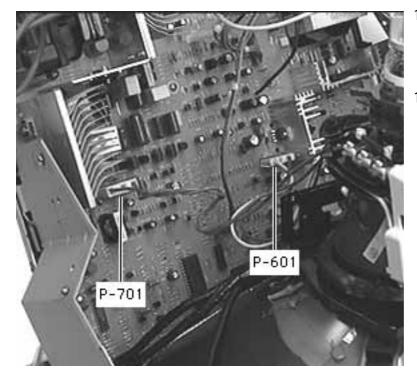

- 13 Disconnect the twowire cable from P701 on the main deflection board.
- 14 Disconnect the twowire cable from P601 on the main deflection board.







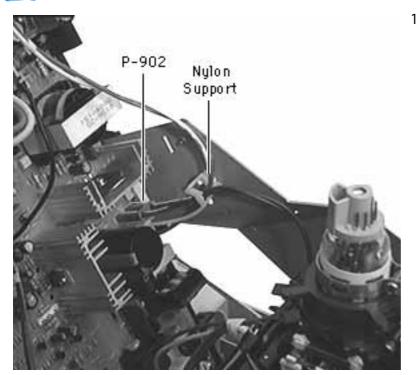

15 Disconnect the twowire cable from P902 on the main deflection board and remove both cables from the nylon support.





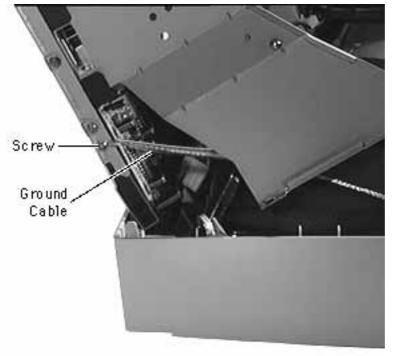


**Caution:** Ground cables are supporting the weight of the video and main deflection board assembly. Support this assembly with your hand when removing the ground cables.

16 Remove the screws securing the two ground cables to the bottom bracket and remove the video and main deflection board assembly from the CRT and bezel.






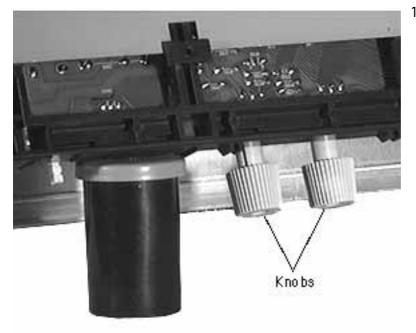

17 Remove the user brightness and contrast knobs from the controls on the main deflection board.





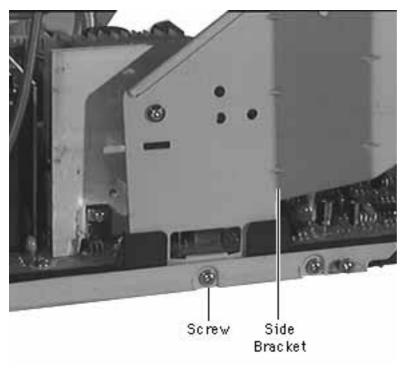

- 18 Remove the screw securing the right side bracket to the bottom bracket.
- 19 Slide the bracket up to clear the main bracket support and remove.
- 20 Remove the screw securing the left side bracket to the bottom bracket.
- 21 Slide the bracket up to clear the main bracket support and remove.



#### Bezel


Before you begin, remove the following:

- Rear Housing
- EMI Shield

**Warning:** This product contains high voltage and a highvacuum picture tube. To prevent serious injury or equipment damage, review the CRT safety and discharge instructions in Bulletins/Safety.






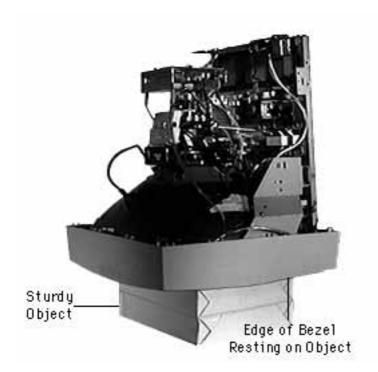

- Place a sturdy, nonabrasive object (such as a large book about 3" x 11" x 8") next to the monitor.
- 2 Lift the monitor from the protective surface and set it on the object.
- 3 Position the monitor so the CRT and the lower edge of the bezel are supported by the object.






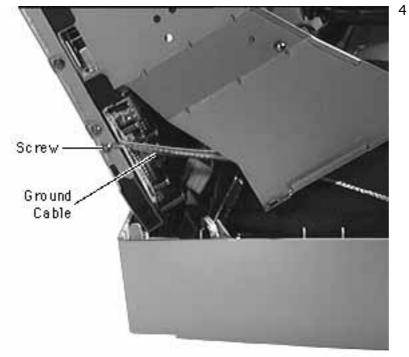

4 Remove two screws securing the ground straps to the bottom bracket.






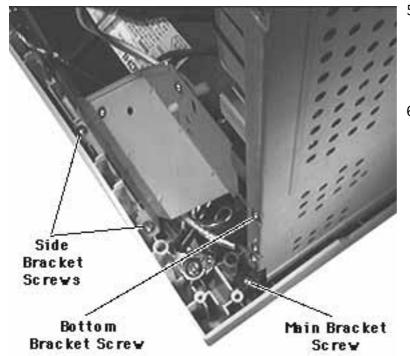

- 5 Remove four screws securing the left and right side brackets (two screws each) to the bezel.
- 6 Remove the two screws securing the main bracket to the bezel.





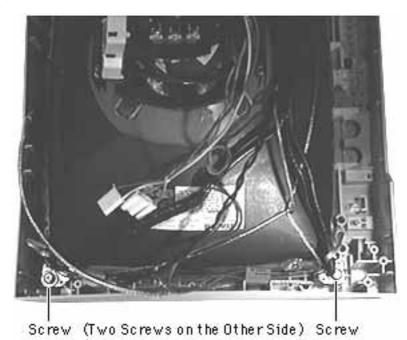


7 Remove the four screws securing the D-coil holders and CRT to the bezel.

**Replacement Note:** Be sure to install the D-coil holders when installing the screws.







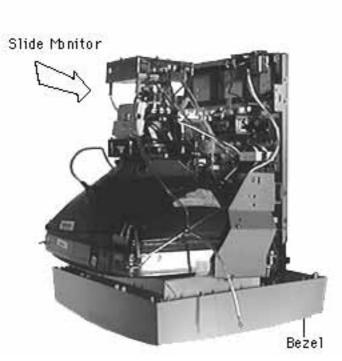


- Bezel 37
- 8 Gently slide the monitor so the bezel is no longer supported by the object and let the bezel rest on the protective surface.

**Caution:** The CRT and deflection board are connected only by cables. Support both when lifting or connectors may be damaged.

**Caution:** User brightness and contrast controls will **not** support the weight of the video and deflection board assembly. Set the assembly on supports or the controls may be damaged.





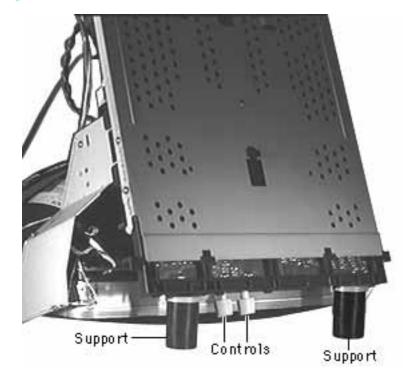

- Position two supports (1.5 to 2 inches tall) on the protective surface about one foot apart.
- 10 Carefully lift the CRT and video and main deflection board assembly from the bezel.
- 11 Set the CRT on the protective surface and the video and main deflection board assembly on the supports.





**Replacement Note:** Carefully line up the brightness and contrast controls into the bezel when installing. The controls will bind on the bezel tabs and not operate if not carefully aligned.

**Replacement Note:** Position a sturdy nonabrasive object inside the bezel. Carefully place the CRT and video and main deflection board assembly on the sturdy object. Lift the bezel and line up the screw holes and brightness and contrast knobs with the CRT and video and deflection board assembly. Slide the monitor until the lower edge of the bezel is supported by the object. This will hold the bezel in place while the screws are installed.







## Brightness and Contrast Knobs

**Warning:** This product contains high voltage and a highvacuum picture tube. To prevent serious injury or equipment damage, review the CRT safety and discharge instructions in Bulletins/Safety.

Before you begin, remove the following:

- Rear Housing.
- EMI Shield
- Bezel

Slide the brightness and contrast knobs from their controls.





## On/Off Switch with Spring


**Warning:** This product contains high voltage and a highvacuum picture tube. To prevent serious injury or equipment damage, review the CRT safety and discharge instructions in Bulletins/Safety.

Before you begin, remove the following:

- Rear Housing.
- EMI Shield
- Bezel





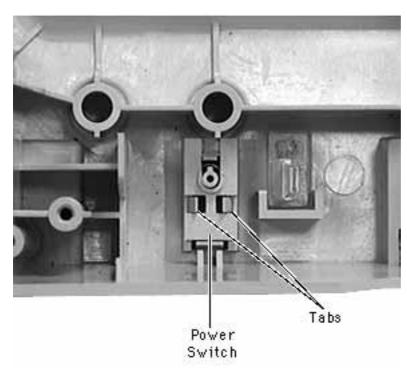

**Note:** The switch is spring loaded and will fly when pushed from the bezel.

1 Pinch two retainers on the on/off switch together and push from the back of the bezel.





## Control Panel Cover Latch


Before you begin, remove the following

- Rear Housing.
- EMI Shield
- Bezel
- 1 Prop the bottom edge of the bezel up about two inches.
- 2 Open the control panel cover.







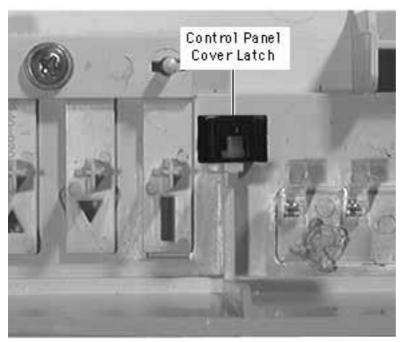

3 With an object about one-half inch in diameter and three inches long, drive the latch from the inside of the bezel.

# **Replacement Note:** The latch can be installed when the monitor is fully assembled





## Rear Fence, Internal Video, AC Inlet Assembly


Before you begin, remove the following:

- Rear Housing
- EMI Shield

**Warning:** This product contains high voltage and a highvacuum picture tube. To prevent serious injury or equipment damage, review the CRT safety and discharge instructions in Bulletins/Safety.






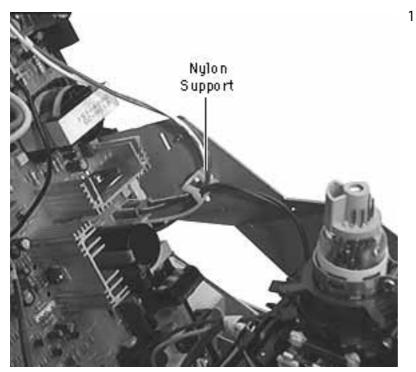

Remove all wires from the nylon support on the right side bracket.







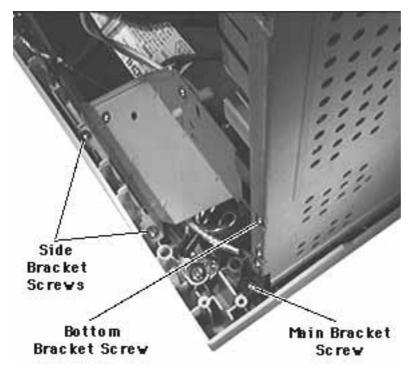

**Note:** Steps 2 through 7 are for accessing P901 only.


- 2 Remove two screws securing the right side bracket to the bezel.
- 3 Remove one screw securing the right side of the main bracket to the bezel.
- 4 Remove one screw securing the right side bracket to the bottom bracket.




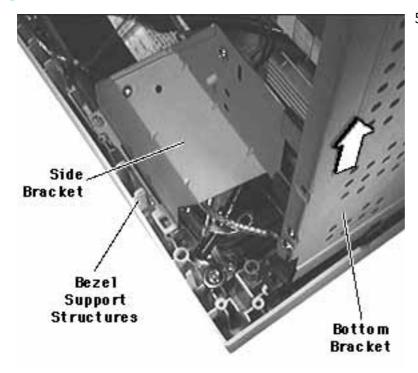

5 Gently lift the right side of the bottom bracket so the side bracket just clears the bezel support structures.






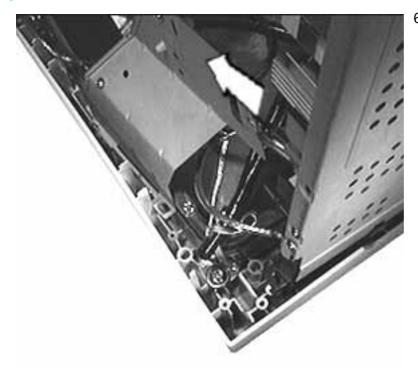

6 Slide the side bracket from the main bracket support and remove.






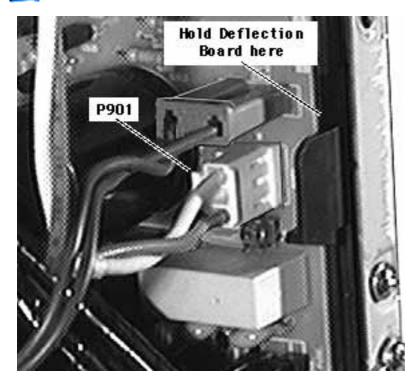

- 7 Support the main deflection board with your hand.
- 8 Disconnect the twowire cable from P901 on the main deflection board.






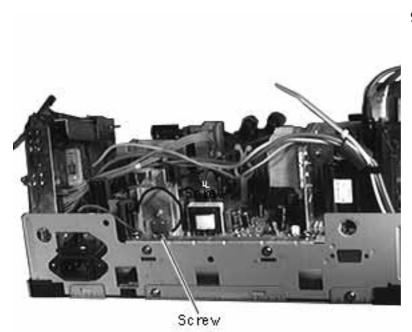

9 Remove the screw securing P704 cable to the rear fence.






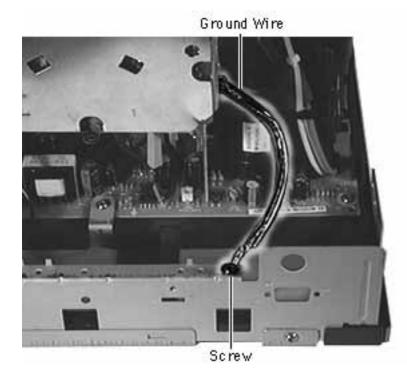

10 Remove the screw securing the video board ground wire to the fence





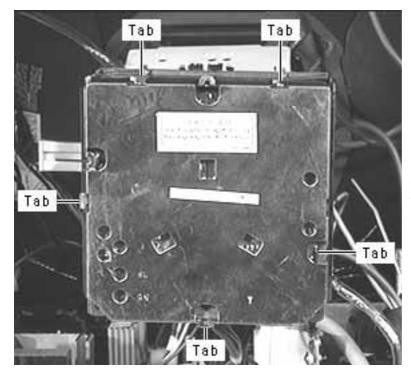


- 11 Carefully straighten the tabs on the cover shield plate.
- 12 Remove the cover shield plate from the video board.

**Replacement Note:** Do not bend the cover shield plate tabs more than necessary. They are easily broken.






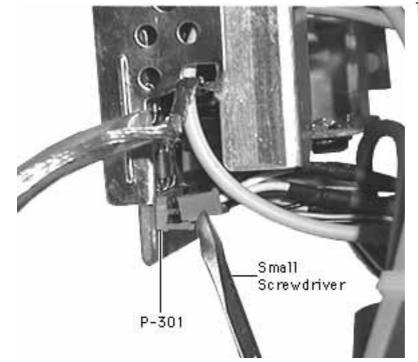

- 13 Disconnect the twelvewire cable from P301 on the video board.
  - Insert a small flatblade screwdriver between the connector and tab.
  - Gently move the tab away from the connector and work one side of the connector up until it clears the tab.






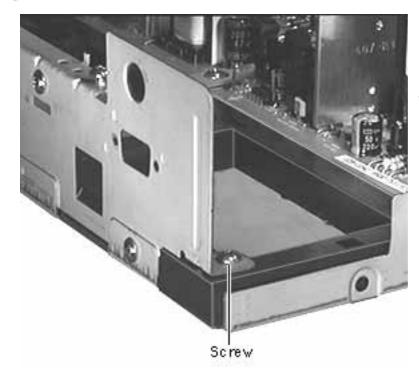

- Repeat this procedure for the other side of the connector and remove.
- 14 Remove two screws securing the rear fence to the top of the main bracket.





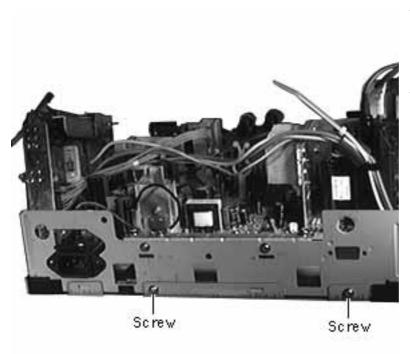

- 15 Remove two screws securing the fence to the back of the main and bottom brackets.
- 16 Slide the rear fence up and remove it from the main and bottom brackets.





## Video Interconnect Cable

Before you begin, remove the following:


- Rear Housing
- EMI Shield

**Warning:** This product contains high voltage and a highvacuum picture tube. To prevent serious injury or equipment damage, review the CRT safety and discharge instructions in Bulletins/Safety.

**Caution:** To prevent ESD damage to components, wear a grounding wriststrap. Never use a grounding wriststrap until after discharging the CRT.






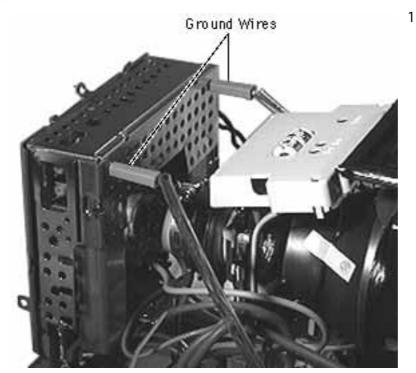

Remove two ground wires from the top of the video board.





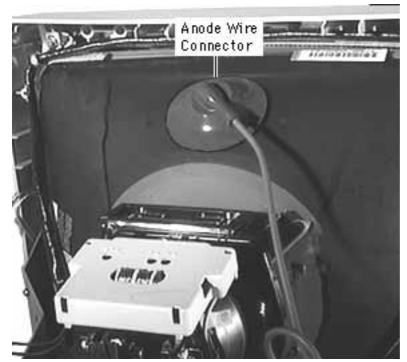


**Warning:** Be sure the monitor has no power and the CRT has been properly discharged. Serious injury could occur if the anode wire is removed while the CRT is charged.

2 Remove the anode wire connector from the CRT.






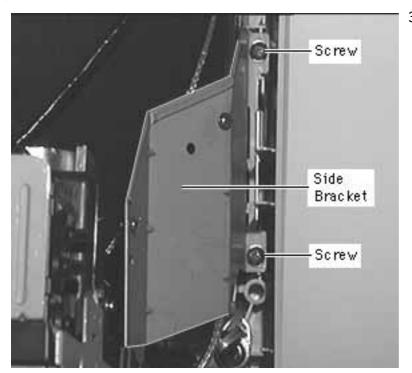

3 Remove four screws (two each bracket) securing the left and right side brackets to the bezel.





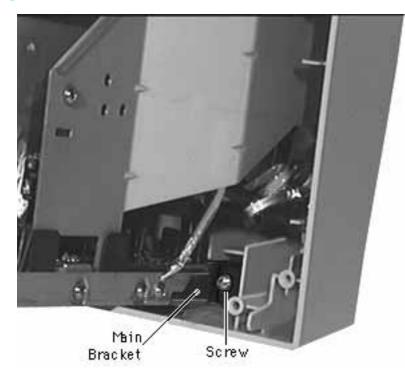

4 Remove two screws securing the main bracket to the bezel.







**Caution:** Care must be taken not to disturb the user brightness and contrast control knobs while lifting the video and main deflection board assembly.

5 Lift and tilt the video and main deflection board assembly away from the CRT.







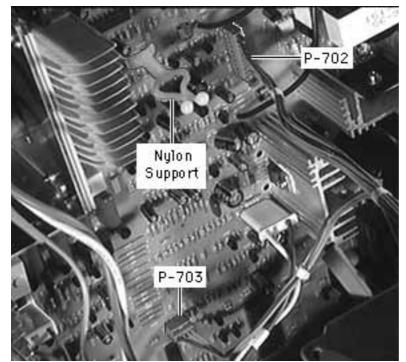

6 Remove the cable from the nylon support.


**Note:** Connector on P703 is hot-glued.

7

Disconnect the cable from P702 and P703 on the main deflection board to remove the cable from both connectors:






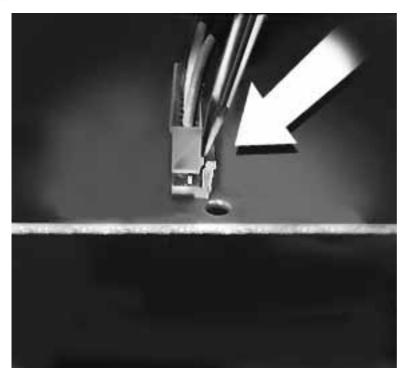

- Insert a small flat blade screw-driver between the connector and the tab.
- Gently move the tab away from the connector and work one side of the connector up until it clears the tab.
- Repeat this procedure for the other side of the connector.





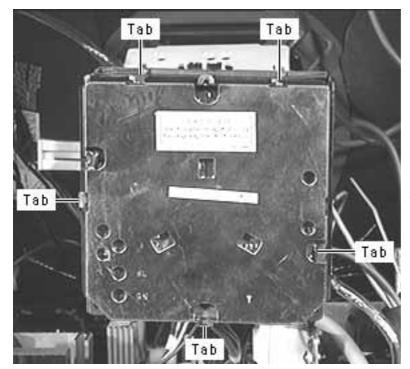


- 8 Carefully straighten the tabs on the cover shield plate.
- Remove the cover shield plate from the video board.

**Replacement Note:** Do not bend the cover shield plate tabs more than necessary. They are easily broken.





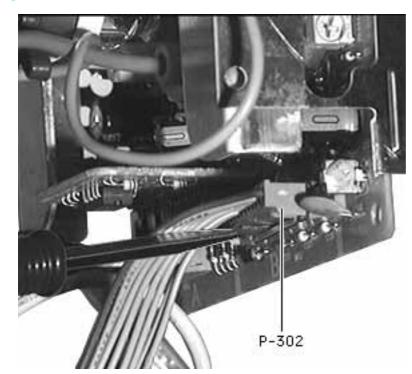

- 10 Disconnect the 12-wire cable from P302 on the video board.
  - Insert a small flatblade screwdriver between the connector and tab.
  - Gently move the tab away from the connector and work one side of the connector up until it clears the tab.






- Repeat this procedure for the other side of the connector.
- 11 Remove the cable from the monitor.





## Multiple Scan 1705 Display Simplified Wiring Diagram

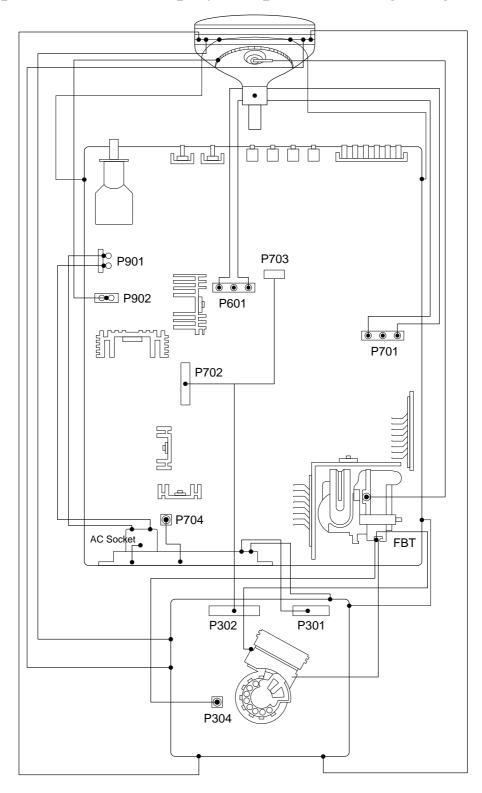



## Additional Procedures

Apple Multiple Scan 1705 Display





## Introduction

The "Adjusting the Degaussing Coils" procedure describes the proper position of the degaussing coils in relation to the CRT corners and the canceling coil.

Follow this procedure whenever you take apart or reassemble a unit.

**Important:** To maximize performance of the Apple Multiple Scan 1705 Display, the degaussing coils must

- Remain securely attached to the corners of the CRT
- Remain at least 1.25 inches (30 mm) from the bottom canceling coil on the yoke of the CRT










# Adjusting the Degaussing Coils

Before you begin, refer to the Take Apart chapter to remove

- Monitor stand
- Rear housing
- EMI shield



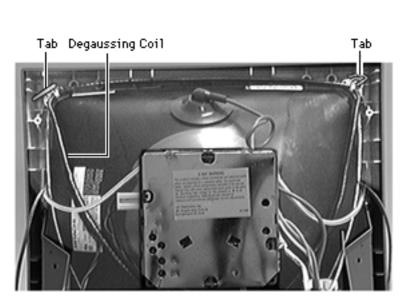


- 1 At the top two corners of the CRT, release the degaussing coil from the two bendable tabs.
- 2 Lower the degaussing coil so its top corners are positioned at least 2 inches (50 mm) away from the CRT corner screws. Bend the tabs to secure the degaussing coil in this position.



Additional Procedures



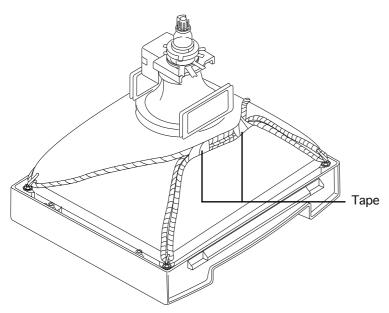

3 **Note:** Do not remove the board assemblies. The illustration at left shows the boards removed for clarification only.


Check for tape or clips where the degaussing coils overlap (near the deflection yoke).

4 If the degaussing coils are not attached with tape or clips, use two pieces of electrical tape (about 6 inches long, each) to fasten the two coils closely together.






5 At the bottom two corners of the CRT, release the degaussing coil from the two bendable tabs.

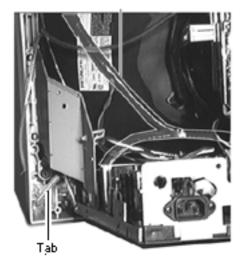



Additional Procedures

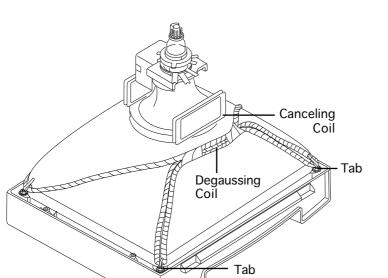


6 **Note:** Do not remove the board assemblies.

Pull the degaussing coil downward until the overlapped taped section (where the degaussing coils meet) is positioned 1.25 inches (30 mm) from the bottom canceling coil.

Bend the two bottom tabs to secure the degaussing coil in this position.

7 Reassemble the monitor.







# Adjustments

Apple Multiple Scan 1705 Display



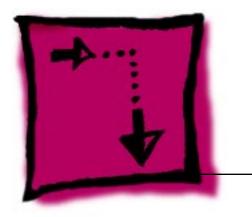




# User Adjustments

The image adjusted by the user is saved into the memory on the monitor CPU (Central Processing Unit). Therefore, when the monitor is powered on again, the image is displayed exactly the same as saved by the user.





#### Adjustments

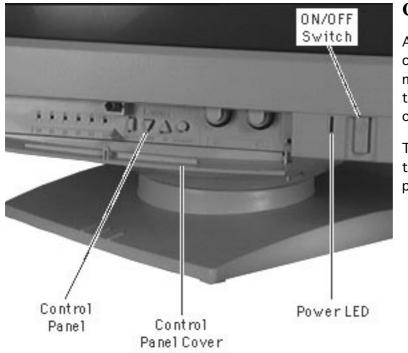

### Controls


A flip-down door covers the controls on the front of the monitor. Gently push on the top center of the door to open or close it.

The power button is located to the right of the control panel and power LED.







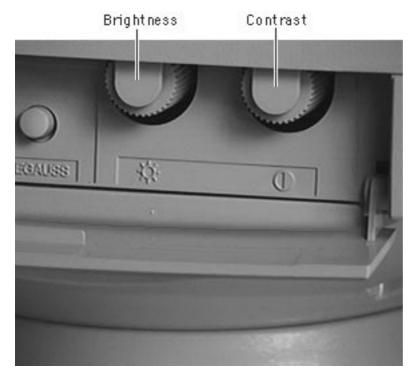


# **Brightness**


Rotate the brightness control clockwise or counterclockwise to increase or decrease brightness.

# Contrast

Rotate the contrast control clockwise or counterclockwise to increase or decrease contrast.





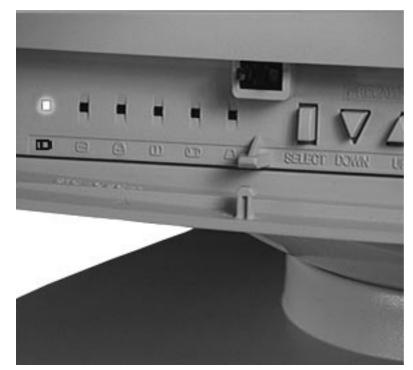

# Geometry


### **Horizontal Center**

- 1 Press and hold the SELECT button until the indicator light for the horizontal center icon goes on.
- 2 Press the DOWN and UP buttons to move the center of the picture left or right.







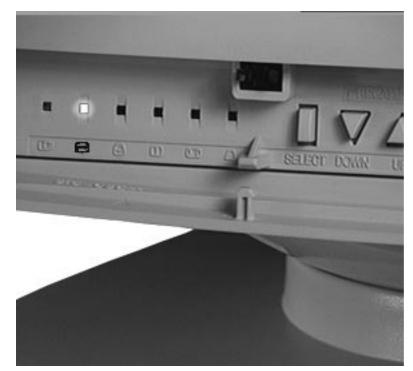


#### Width of Picture

- 1 Press and hold the SELECT button until the indicator light for the width icon goes on.
- 2 Press the DOWN and UP buttons to narrow or widen the picture.







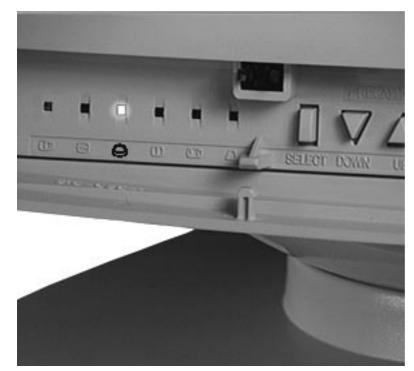


#### **Vertical Center**

- 1 Press and hold the SELECT button until the indicator light for the vertical center icon goes on.
- 2 Press the DOWN and UP buttons to move the center of the picture down or up.







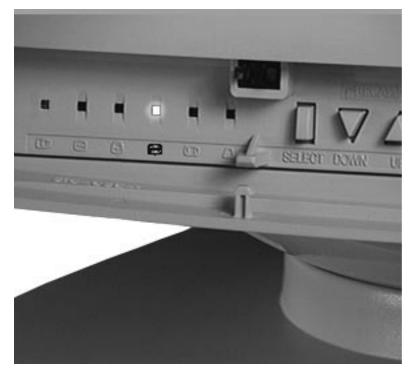


#### **Height of Picture**

- Press the SELECT button until the indicator light for the height icon goes on.
- 2 Press the DOWN and UP buttons to decrease or increase the height of the picture.







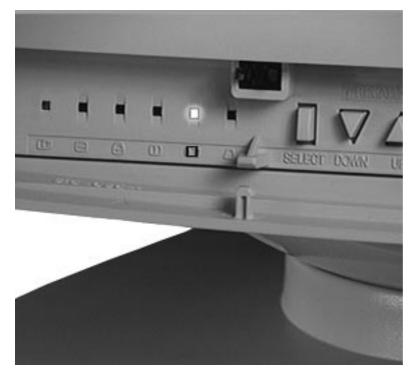


#### **Picture Curvature**

- 1 Press and hold the SELECT button until the indicator light for the picture curvature icon goes on.
- 2 Press the DOWN and UP buttons to change the arch of the picture border.

 $\Box$ 





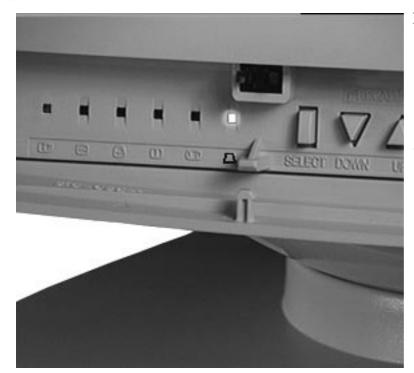

#### **Picture Side Alignment**

- 1 Press and hold the SELECT button until the indicator light for the side alignment icon goes on.
- 2 Press the DOWN and UP buttons to change the alignment.







#### Adjustments




#### Degauss

Press the DEGAUSS button to degauss the monitor.





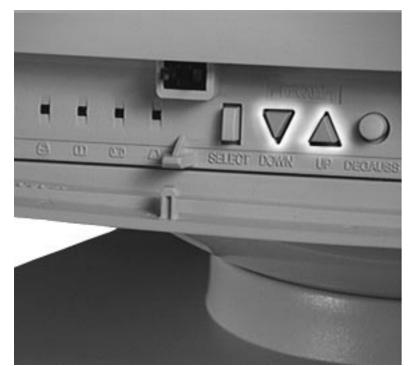

## **Factory Settings**

**Note:** Picture controls are generally fine-tuned by the user.

To revert to the factory settings, press the DOWN and UP buttons at the same time.





Adjustments

# Non User Adjustments

**Warning:** This product contains high voltage and a highvacuum picture tube. To prevent serious injury or equipment damage, review the CRT safety and discharge instructions in Safety Information under the DO menu.

**Warning:** Use a plastic screwdriver to make all adjustments to the controls located on the video and main deflection boards.

**Caution**: To prevent ESD damage to components, wear a grounding wriststrap. Never use a grounding wriststrap until after discharging the CRT.

**Important:** At the end of this chapter, there is a drawing locating all of the adjustment points. You may want to print it out.



# **Light Meter Setup**

**Note:** When a color analyzer or photometer are not available, use an R77, a 246, or an L-248 light meter to measure the brightness of the monitor screen.

Model R77 (Apple part number 076-0310) is the newest light meter model available.





#### Model R77


The R77 light meter is capable of reading luminance from 10 to 1,000 footcandles (fc).

Before you begin, remove the 10X multiplier plate from the lens.










Lens 200-1000 fc 50-250 fc 10-50 fc COLOR / SOL Three scales are shown on the light meter:

- 200-1000 fc
- 50-250 fc
- 10-50 fc

Because display screen luminance typically ranges from 10 to 50 fc, take readings from the bottom scale only.





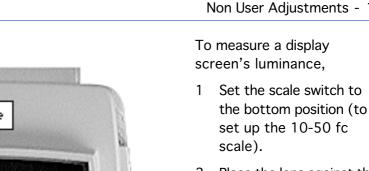


2 Place the lens against the middle of the screen and read the bottom scale.

**Note:** When the light meter is not in use, slide the scale switch to its top position, and store the meter in its protective case.

Important: If you suspect the light meter is giving false



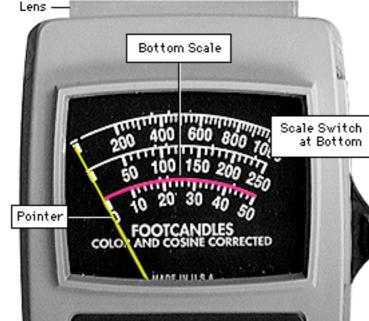

Non User Adjustments - 16





readings, verify the readings with a known-good light meter or photometer. Also check the age of the R77 light meter by its four-digit manufacturing date stamp (such as 0398 for March 1998).

**Caution:** Dropping the meter can permanently damage its accuracy. A shock-damaged meter might read incorrectly or its pointer may not drop to zero.







#### Model 246

**Note:** Follow this procedure to set up the meter when making brightness adjustments.

Remove the metal slide, if installed, and insert it into the slot on the back of the meter.







**Note:** The white disk lens is removed only for some procedures.

2 Remove the white disk lens. Turn it counterclockwise so the dot on the lens aligns with the dot on the meter and, pull the lens from the meter.





3 Rotate the lens head of the meter to face the monitor.










4 Hold the lens against the middle of the monitor screen.







#### Adjustments

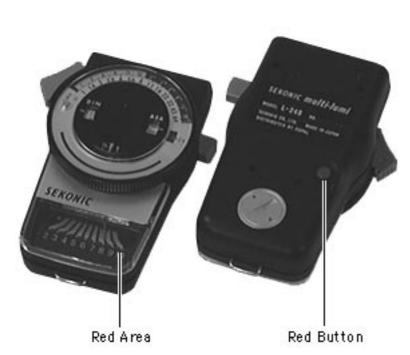

#### Model L-248


**Note:** Follow this procedure to set up the meter when making brightness adjustments.

1 Press the red button on the back of the meter to check the battery. If the reading is out of the red area on the scale, replace the battery.






2 Slide the scale selector to the lower position to access the 2 to 10 scale.

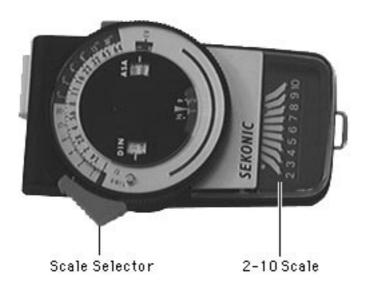






3 Slide the selector to the upper position to access the 10 to 18 scale.

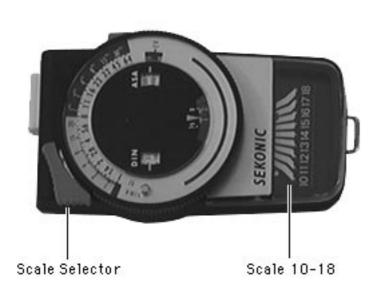





4 Slide the diffuser away from the lens when using the meter to read brightness.

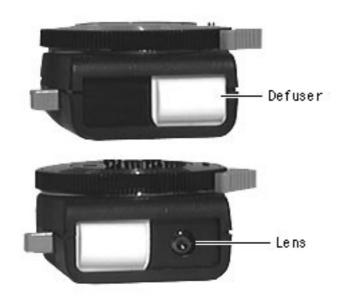







- 5 Hold the lens against the middle of the monitor screen.
- 6 Press the button on the right to take the reading. The needle will lock in place when the button is released.




# Raster Center Adjustment

Before you begin, remove the following:

- Rear Housing
- EMI Shield
  - Using Display Service Utility on the Service Source Companion CD, select the display pattern containing a grid on a white field.
- Set the user controls to maximum brightness and contrast (clockwise).



_										_		
-	H	H	H	H	H	H	Н	Η	Н	-		
_	F	F	F	F	F	F	Р		Р	_		
_												

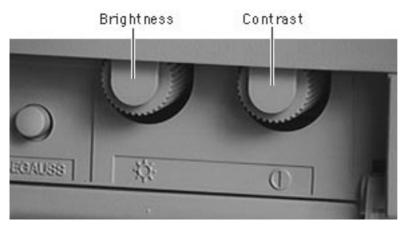






3 Adjust VR701 (H-RASTER CENTER) so the picture is horizontally centered on the screen.





# M Adjustments

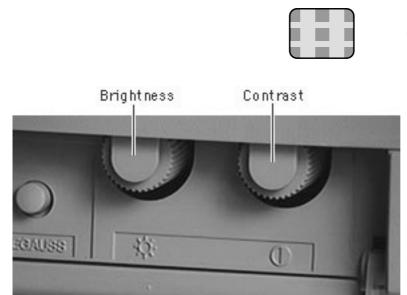

# **Focus Adjustment**

Before you begin, remove the following:

- Rear Housing
- EMI Shield
  - Using Display Service Utility, select the display pattern containing nine gray boxes on a dark field.
- Set the user controls to maximum brightness and contrast (clockwise).








3

Adjust the focus at VR F1 and F2 on the flyback transformer, until the focus test pattern reaches the best possible focus at the center of the screen.

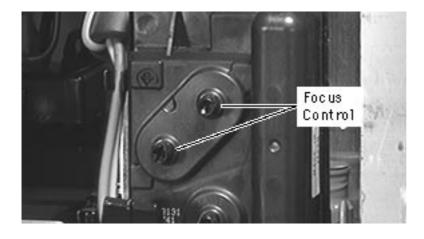





## High-Voltage Adjustment


**Note:** Adjust the high voltage whenever a module is replaced or if the setting at VR501 was accidentally changed.

Before you begin, remove the following:

- Rear Housing
- EMI Shield



M Adjustments






1 Using Display Service Utility, select the display pattern containing a grid on a white field.

2

Using the height and width controls on the front control panel and a plastic ruler, adjust the screen size to 12 inches (300 mm) by 9 inches. (225 mm).





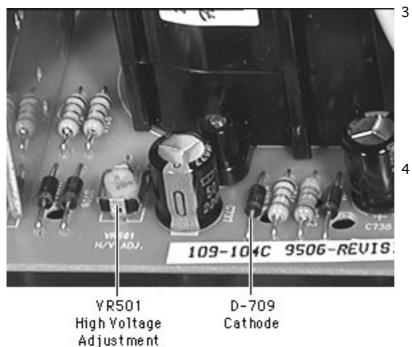

- Attach the multimeter.
  - Attach the negative probe to the chassis (ground).
  - Hold the positive probe to the lead on the striped side of the D709 cathode.
- Adjust the voltage at VR501(HV) until the multimeter reads 29.5 volts ± 0.1volt.





## Cutoff and White Balance Adjustments

Before you begin,

- Run the monitor for a minimum of 15 minutes.
- Degauss CRT Screen
- Remove Rear Housing
- Remove EMI Shield
- Adjust High Voltage

Note: Cutoff and white balance adjustments must be performed whenever the video and main deflection boards are replaced. Replacement modules need to be adjusted to the monitor's






CRT before color and brightness can be reproduced correctly.





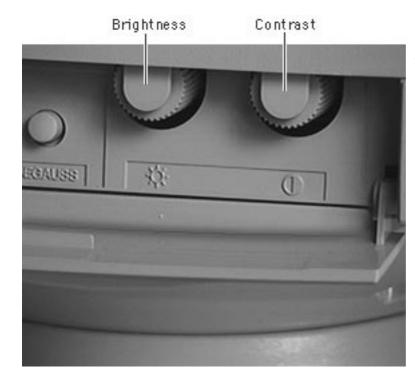


### Presets for Cutoff and White Balance Adjustments

 Set the user controls to maximum brightness and contrast (clockwise).






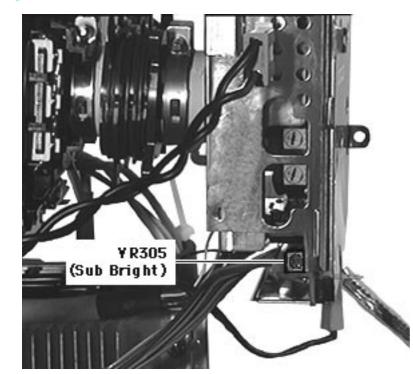

2 Adjust VR305 (SUB BRIGHT) to its maximum position (clockwise).





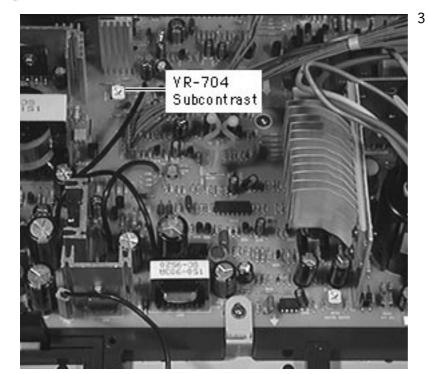

3 Adjust VR704 (SUB-CONTRAST) to its center position.






VR301 G-Drive VR302 R-Drive 4 Adjust VR301 (G-DRIVE) and VR302 (R-DRIVE) to their center positions.







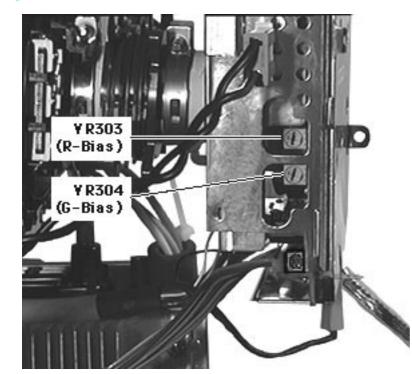

5 Adjust VR303 (R-BIAS) and VR304 (G-BIAS) to their minimum positions (counterclockwise).






#### **Cutoff Adjustment**

**Note:** If presets were done correctly, when the white screen is displayed using Display Service Utility, the screen will have a blue tint. If the blue tint is not present, redo the presets.

- 1 In the monitor control panel, set the monitor operation to 832x624.
- 2 Using Display Service Utility, select the allwhite screen.





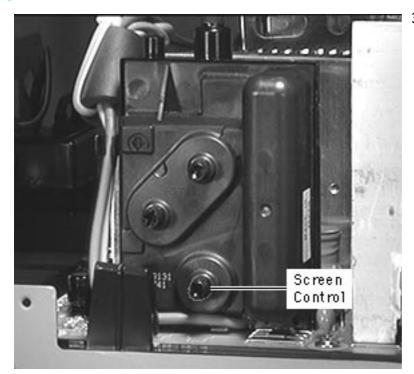


- 3 Adjust the screen control until the display luminance measures:
  - 10 on the bottom scale of light meter model R77
  - Between 5 and 10 on the lower scale of light meter model 246
  - Between 5 and 10 on the 2-10 scale of light meter model L-248
  - 0.3 foot lamberts on a photometer or color analyzer





Adjustments

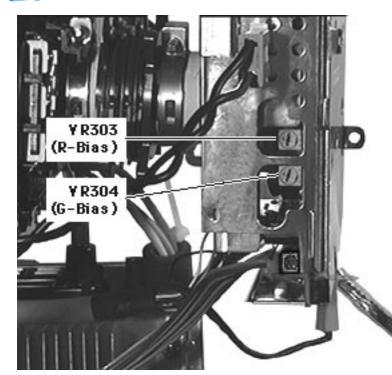


**Note:** VR304 and VR303 may have to be adjusted several times to obtain a neutral gray.

- 4 Use Display Service Utility to select the gray bars pattern, and adjust VR304 (G-BIAS) until the screen is blue-green (equal amounts of blue and green).
- 5 Adjust VR303 (R-BIAS) until the screen is neutral gray (no color present).





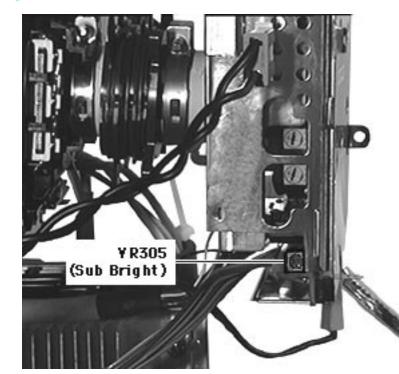

- 6 Adjust VR305 (SUB-BRIGHT) until the display luminance measures:
  - Between 15 and 20 on the bottom scale of light meter model R77
  - Between between 15 and 20 on the lower scale of light meter model 246
  - Between 5 and 6 on 2-10 scale of light meter model L-248
  - 0.9 foot lamberts on a photometer or color analyzer





#### White Balance Adjustment


**Note:** Cutoff must be properly set before the white balance can be adjusted. If the cutoff was **not** adjusted, go to that procedure and adjust the cutoff now.

1

Using Display Service Utility, select the display pattern containing a small white box on a black field.





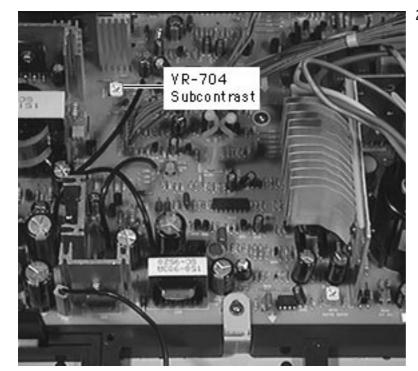


- 2 Adjust VR704 (SUB-CONTRAST) until the display luminance measures:
  - 26 on the bottom scale of light meter model R77
  - Between between 26 and 27 on the lower scale of light meter model 246
  - 11 on the 10-18 scale of light meter model L-248
  - 50 foot lamberts on a color analyzer or photometer







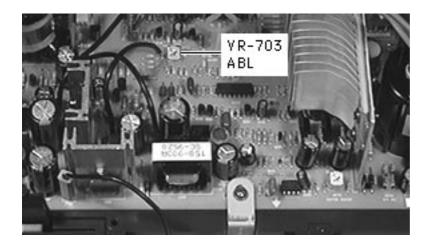

- 3 Select the all-white display pattern.
- 4 Adjust VR703 (ABL) until the luminance measures:
  - 16 on the bottom scale of light meter model R77
  - Between between 16 and 17 on the lower scale of light meter model 246
  - 9.5 on the 2-10 scale of light meter model L-248
  - 24 foot lamberts on a color analyzer or photometer






5 Set the user brightness control to the middle position.






Use this drawing to locate the adjustment points on the main deflection and video boards.

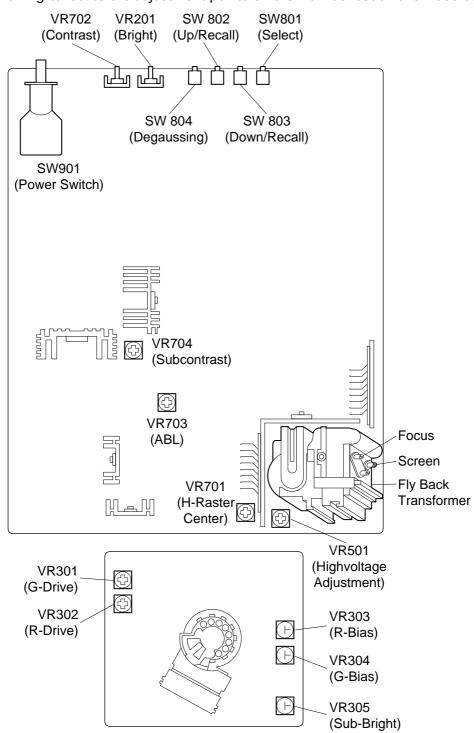





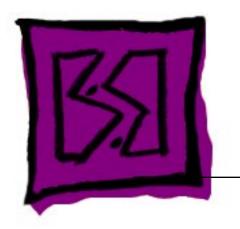

# Exploded View

Apple Multiple Scan 1705 Display Exploded View

